

895 - 995 Tractors

Operators Manual

9-19760

Reprinted



TO THE OWNER _____

TO THE OWNER

Use this manual as your guide. If you follow the instructions given in this manual, your tractor will work well for many years.

Your dealer can give you assistance with Case Corporation made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your dealer if you need any assistance or information.

MODEL 995 TRACTOR With Mechanical Front Drive



D12902

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

GENERAL TABLE OF CONTENTS

Safety/Decals	6
Instruments/Controls	15
Operating Instructions	37
Field Operation	75
Tires/Wheels/Spacing/Ballast	98
Lubrication/Filters/Fluids	129
Maintenance/Adjustments	163
Electrical System	180
Storage	194
Specifications	197
Detail Index	217

IDENTIFICATION NUMBERS _____

 
PRODUCT IDENTIFICATION AND SERIAL NUMBERS

When ordering parts or when requesting information or assistance always give the model and serial numbers of your tractor.

Write the model and serial numbers of your tractor on the lines below.

Serial Number Locations


TRACTOR

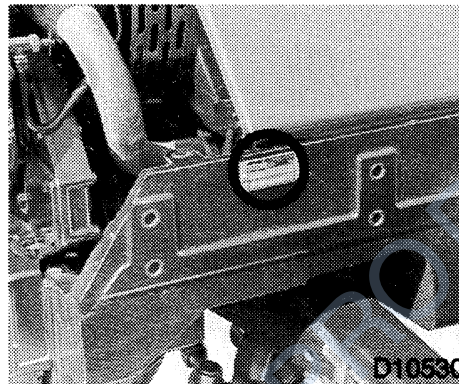

Model and Product _____


Identification Number _____

 ENGINE

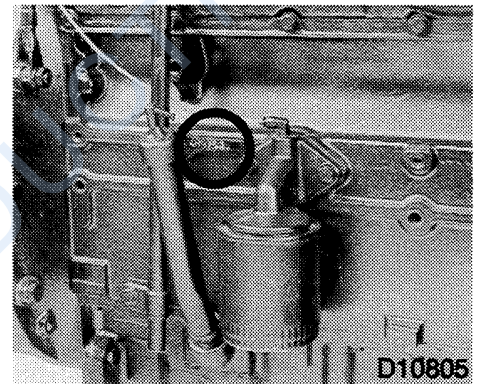


Serial Number _____

 TRANSMISSION

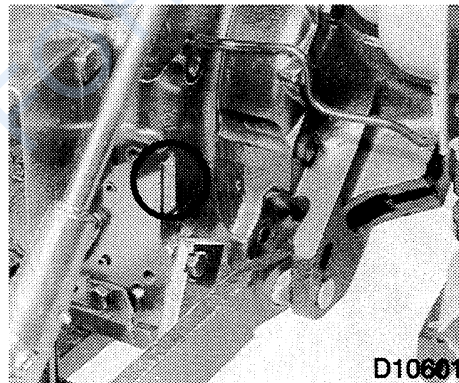

Serial Number _____

 MFD AXLE

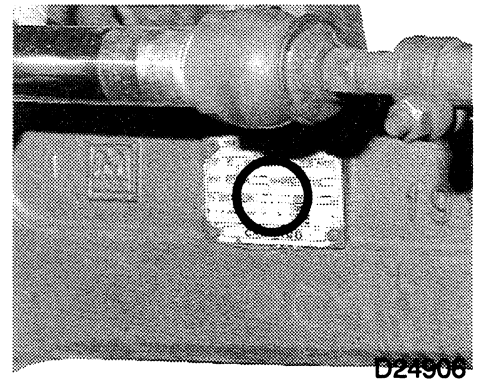


Serial Number _____

Transmission Oil Change


To change the transmission fluid, put the tractor on level ground.

For best results drain the oil when the oil is warm.

 
1. Remove the drain plugs. On tractors with MFD remove the drive shaft shield to get to the front drain plug.
2. Install and tighten the plugs when the oil has drained.
3. Remove the filler plug and install 36 U.S. Quarts (34 litres) of oil for 2WD or 38.6 U.S. Quarts (36.5 litres) for MFD.
4. Operate the engine for three minutes.
5. Stop the engine and check the fluid level. Add oil if necessary.

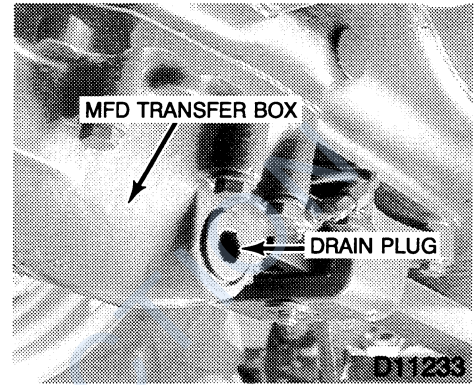


TRACTOR WITH MFD

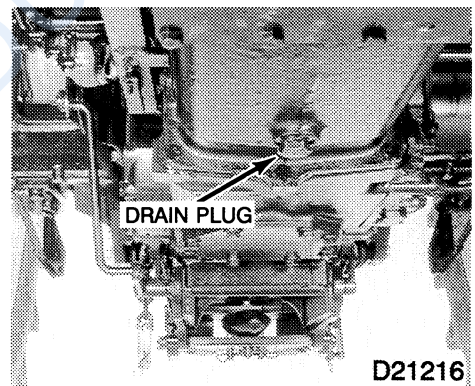 

2WD TRACTOR

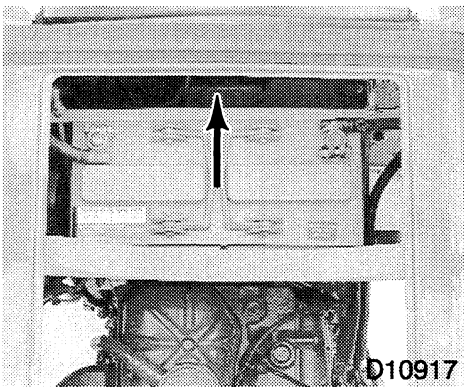 

FUSE LAYOUT
ROPS TRACTOR

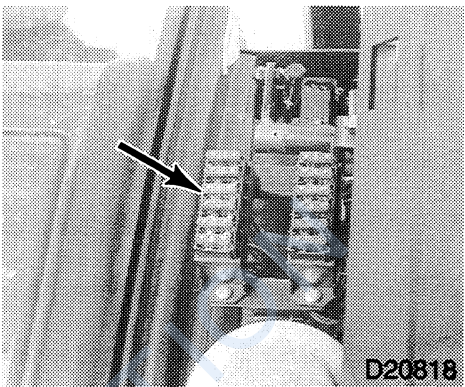 

FUSE LAYOUT
CAB TRACTOR

Fuses (Cab Tractor)


1. Horn, Cigar Lighter	10 Amp
2. Hazard, Direction Turn Signal Lamps	10 Amp
3. Front Work Lamps	10 Amp
4. Rear Work Lamps	10 Amp
5. Head Lamps	15 Amp
6. Side and Tail Lamps	5 Amp
7. Instrument Cluster Set/Hours, Radio	5 Amp
8. Wiper, Washer, Fan	15 Amp
9. Turn Signals (Brake Lamps if equipped)	15 Amp
10. Power Shift and Mechanical Front Drive	5 Amp
11. Instrument Cluster and Tachometer	5 Amp
12. Accessory Power	10 Amp

Fuses (ROPS Tractor)

1. MFD, 2 Speed Powershift, Turn/Signal Lamps	5 Amp
2. Instrument Cluster	5 Amp
3. Ether Start, Auxiliary Connector	30 Amp
4. Turn Signal Lamps	15 Amp
5. Lamps	30 Amp
6. Horn, Auxiliary Connector	5 Amp

Instrument Cluster Lamps

 1. Remove the instrument cluster. DO NOT DISCONNECT THE HARNESS.
2. Turn the bulb holder counterclockwise to remove.
3. Pull the bulb straight out of the holder and push the new bulb in.
4. Install the holder into the cluster, turn holder clockwise to lock.
5. Install the cluster and the four retaining screws.

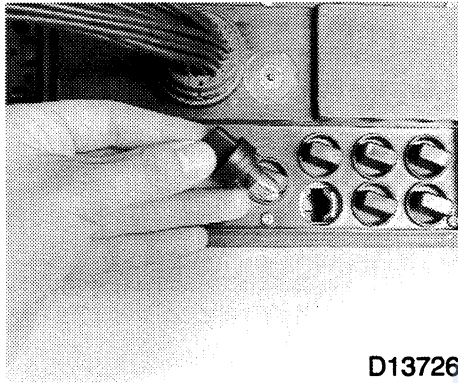


D13726

Rear Work, and Tail Lamps (ROPS Tractor)

The rear work lamp is a sealed beam unit fitted on the rear left fender. The rear tail lamp is located under the rear work lamp.

To replace the rear tail lamp bulb:

 1. Pry off the lens with a small screwdriver.
2. Push down on the bulb, turn and lift out.
3. Push new bulb into socket, turn and release to lock position.
4. Replace lens if damaged and install.

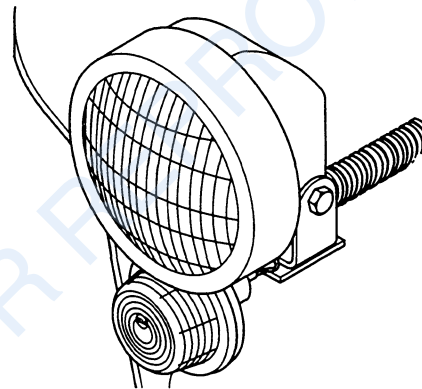

TSM0174

To replace the sealed beam unit:

1. Pull off the rubber housing.
2. Remove the terminal screws to release the tail lamp bracket.
3. Push the sealed beam unit from the rubber housing.
4. Fit the new unit to the rubber housing making sure that the projections on the unit are aligned with the slots in the housing.

DETAIL INDEX

A

Air Conditioner Operation	66
Air Filter - Operator Cab	161
Air Induction System	151
Air Filter	152
Air Filter Restriction Indicator	
Lamp	151
Air Filter Service	153
Service Intervals	151
Alternator Charging System	181
Alternator/Fan Belt Adjustment	166
Approximate Measurements	
and Weights	204-216
Maximum Recommended	
Operating Weights	216
Auxiliary Power Connections	92
Seven Terminal Electrical Outlet ..	92
Axle Oscillation Stops	113

B

Battery	183
Access to Battery	184
Auxiliary Battery Connections	186
Battery Cables and Terminals ...	184
Battery Removal and	
Installation	185
When Battery is Not in Use	185
Before Starting the Engine	38
Brake System	170-175
Air Removal	170
Brake Pedal Height Adjustment	
(Cab Tractor)	174,175
Brake Pedal Height Adjustment	
(ROPS Tractor)	172,173
Park Brake Adjustment	171
Bulb and Lamp	
Replacement	187-192
Dome Lamp	190
Flood and Work Lamps	188
Head Lamps	187
Instrument Cluster Lamps	191
Rear Work and Tail Lamps	
(ROPS)	191
Tail/Amber Warning/Turn	
Indicator Lamps (ROPS)	192

B

Bulb and Lamp Replacement (Cont'd)	
Tail Lamp (Cab Tractor)	189
Turn Lamps/Flashing Amber	
Lamps	189
Warning Lamps Cab and	
ROPS	188

C

Cab Air Flow Arrangements	63-65
Controlled Pressure and Air Flow	
with Air Conditioner	64
Controlled Pressure and Air Flow	
without Air Conditioner	63
With Heat Only	65
Cab Headliner Controls	30,31
Capacities	134
Chart - Lubrication	130-132
Chart - Tire Pressure and	
Load Capacities	101,102
Clutch Adjustment	176-178
Air Removal	178
Pedal Height Adjustment	
(Cab Tractor)	177
Pedal Height Adjustment	
(ROPS Tractor)	176
Cold Temperature Operation	47-51
Engine Starting Using	
Ether Start System	50
Starting Fluid Container	
Replacement	51
Engine Starting Using	
Thermostart System	49
Compressor Belt Check and	
Adjustment	166
Console Right Hand Side	27,28
Controls Left Hand Side	29
Cooling System	147-150
Cleaning the Cooling System	149
Coolant Solutions	148
Engine Coolant Filter and	
Conditioner	150
Filling the Cooling System	149
Grille Screens and Radiator	
Area	165

C

Cooling System (Cont'd)	
Radiator Pressure Cap	147
Creeper Speed Operation	61

D

Decals	10-12
Diesel Engine	
Specifications	197,198
Air Intake System	197
Cooling System	197
Fuel System	198
Lubrication System	198
Differential Lock	62
Differential Lubrication	158
Digital Instrument Cluster	18-20
Bar Graph Display (LCD'S)	18
Direction Turn Indicator Lamps ...	23
Engine Hour Indicator	19
English or Metric Units	93,94
Function and Programming	
Push Buttons	24
Indicating Lamps	20
Programming	93
Drawbar	71
Drawbar Preparation	76
Connecting Implement to	
Drawbar	77

E

Electrical Specifications	180
Engine Lubrication	137-139
Engine Oil Change	138,139
Engine Oil Filter	138
Engine Oil Level	138
Engine Oil Selection	137
Engine Oil Viscosity	137
Service Specifications	138
Engine Specifications	197,198

F

Fan/Alternator Belt	
Replacement	166
Fender Mounting Positions	108
First Service Intervals	41,42
Fluid Levels and Filters	136

F

Forward/Reverse Transmission	59
Front Wheel Bearings - 2WD	160
Front Wheel Bolt Torques	112
Fuel System	140-146
Diesel Fuel Specifications	140
Fuel Filter Drain Plug	142
Fuel Filter Replacement	143
Fuel System Air Removal	145
General Inspection	141
Specifications for Acceptable	
Number 2 Diesel Fuel	140
Fuses and Relays	181,182

G

General Service Information	
Electrical System	181
Alternator Charging System	181
Ground Speed Calibration	
Number	95
Grease Points	135

H

Headlamp Switch	22
Hitch Operation	83-87
Operator Controls	83
Operating in Draft Control	85
Operating in Position Control	83
Raise/Drop Response	86,87
Hitch System Preparation	78
Check Chains	79,80
Hitching an Implement	82
Telescoping Lower Links	81
Upper and Lower Link	
Adjustment	81
Hood and Side covers	163,164
Horn Button	22

I

Identification Numbers	4
Indicator Lamps	17
Instrument Clusters	16-20
Instrument Cluster Programming	93
Programming in English	
or Metric Units	93,94

I

Instrument Cluster Programming (Cont'd)	
Programming in Ground Speed	
Calibration Number	95,96
Instrument Panel and Controls ..	21-24
Instrument Panel and	
Foot Pedals	25,26

K

Key Switch	22
------------------	----

L

Lamps and Bulbs	187-192
Lubrication Chart	130-132

M

Mechanical Front Drive	
Axle	158,159
Differential Lubrication	158
Differential Oil Change	158
Differential Oil Level	158
Planetary Oil Change	159
Planetary Oil Level	159
Service Specifications	158,159
Mechanical Front Drive Switch	23

N

Normal Starting Procedure	44,45
---------------------------------	-------

O

Operating Controls	21-36
Cab Defroster Control	30
Cab Door Lock	33
Cab Rear Window Lever	32
Front Headliner	30
Instrument Panel	21-23
Instrument Panel and	
Foot Pedals	25,26
LH Console	29
Operators Seats	34-36
Rear View Mirrors	33
Recirculation Louver Control	30
RH console	27,28
Roof Hatch	32

O

Operating the Transmission	55-61
Operators Cab	161
Condenser	168
Compressor Belt Check	
and Adjustment	166
Hoses and Wiring	168
Intake Air Filter Service	161
Preventive Maintenance	167
Refrigerant Check	167
Seat Belts	169

P

Park Brake Adjustment	171
Pedal Adjustments	172-178
Planetary Lubrication	159
Power Shift Transmission	58
Power Takeoff	67-70
Connection to PTO	67
Operating of PTO	67
PTO Operating Safety	69
Safety Guard	70
Power Train Specifications	199,200
Axle Differential and	
Planetaries	199
Brakes	199
Differential Lock	199
Drawbar	199
Hydrostatic Power Steering	199
Park Brake	199
Power Takeoff	199
Remote Hydraulic System	200
Transmission	200

Product Identification and	
Serial Numbers	4
Programming Instrument Cluster	93

R

Rear Wheel Mounting Torques	120
Rear Hitch Operation	83-91
Remote Hydraulics	88-91
Connecting Remote Hoses	91
Float Operation	88
Hose Couplers	90
Operation	89
Remote Hydraulic Control	88

R

Roll Over Protective Structure	13,14
ROPS Frame	97
ROPS Label	14
Safety Rules	14
Tractor Roll Over	14
Run-In Procedure	40

S

Safety	7
Safety Rules	7-9
Seat Belts	43
Serial Number Locations	4
Service Indicator Lamps	39
Specifications - Diesel	
Engine	197,198
Air Intake System	197
Cooling System	197
Fuel System	198
Lubrication System	198
Specifications - Electrical	180
Accessory Connectors	180
Fuses	181,182
Lamps and Bulbs	180
System Specifications	180
Specifications - General	
Machine	199,200
Brakes	199
Differential Lock	199
Drawbar	199
Hitch System	200
Mechanical Front Drive	199
Power Steering	199
Power Take Off	199
Remote Hydraulic System	200
Transmissions	200
Standard Instrument Cluster	16,17
Starting the Engine	44,45
Using Booster Batteries	52
Static Calibration Code	
Number	95,96
Steering Angle and Oscillation	
Charts	114,115
Steering Stop Adjustments	113
Stop Control button	23

S

Stopping the Engine	46
Storage	194,195
Syncromesh Transmission	57

T

Table of Contents	3
Three Point Hitch Operation	83-91
Three Point Hitch Preparation	78-82
Tire and Wheel Equipment	99,100
Check Air Pressure	100
Tire Inflation Procedure	100
Tire Inflation Specifications	99
Tire Load Capacity	100
Tire Pressure Load and	
Capacity Chart	101,102
Tire and Rim Repair	103
Tire Installation	103
Tire Size Combinations	121
Toe In Settings	109-111
MFD Axle	111
Two Wheel Drive Axle	109,110
To the Owner	1,2
Towing	53
Engine Not Running	53
Engine Running	53
Tractor Ballast	122-128
Front End Weights	126
Loads Matched to Tractor	122
Measuring Wheel Slip	125
Rear Wheel Weights	126
Tire Liquid Ballast	127
Tractor Weight Distribution	123
Tractor Warning Lamps and	
Direction Turn Signals	72
Amber Warning Lamps	73
Transmission Lubrication	155
Hydraulic System Filters	157
Service Specifications	155
Transmission Oil Change	156
Transmission Oil Level	155
Transmission Operation	55
Transmission Serial Number	5
Transmission Speeds	56
Transporting the Tractor	54

T

Travel Speeds	201-203
Tread Positions Front	
Wheels	104-108
MFD Axle	105-107
Two Wheel Drive Axle	104
Tread Positions Rear	
Wheels	116-119
Row Crop Tractors	118,119

V

Valve Clearance	119
Ventilation Control Settings	31

NOT FOR REPRODUCTION