


LELY WELGER

RP 245

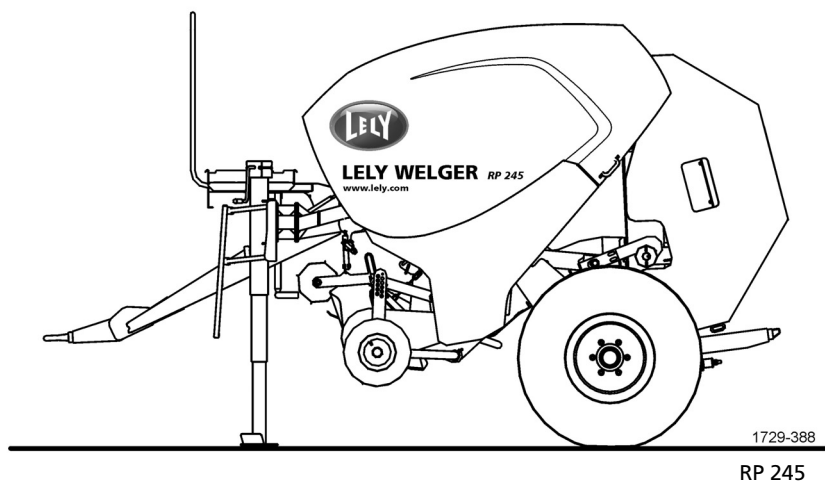

1745.99.03.03 11.10 (Translation of the original manual)

GB Operating Manual



www.lely.com

innovators in agriculture

TABLE OF CONTENTS

1. TYPE OVERVIEW	7
2. IT IS FOR YOUR SAFETY	8
2.1. General safety instructions.....	8
2.2. Noise level of tractors and machines	9
2.3. Fire prevention	10
2.4. Tail gate safeguard.....	10
2.5. Net knife safeguard	11
2.6. Guard casings	12
2.7. Maintenance Platform and Ladder	12
2.8. Symbols in this manual	13
2.9. Warning symbols at the machine	14
2.10. Text-free operating instructions at the machine.....	16
2.11. Proper use	17
2.12. Foreseeable misuse	17
2.13. Electromagnetic compatibility (EMC)	18
2.14. To heed in the road traffic	18
3. OVERVIEW OF THE ASSEMBLY GROUPS	22
3.1. Machine	22
3.2. Control	23
3.3. Protection of the control unit	24
3.4. Set machine type (Balercontrol E)	24
3.5. Set machine type (E-Link)	24
4. START UP	25
4.1. Attach baler	25
4.2. Drive shaft	30
4.3. Net knife safeguard	32
4.4. Hydraulic connections	32
4.5. Electrical system	35
4.6. Compressed-air braking system	36
4.7. Hydraulic braking system	37
5. TWINE TYING*	38
5.1. Thread twine	38
5.2. Binding bar	40
5.3. Adjusting the twine brake	41
5.4. Further settings	42
6. NET TYING*	43
6.1. Inserting the net.....	43
6.2. Tighten net knife	48
6.3. Setting of net layers.....	48
7. CUTTING DEVICE*	49
7.1. Equipment	49
7.2. Knife groups	49
7.3. Moving in and out the cutting device.....	52
7.4. Lock bottom door.....	64
7.5. Brittle crop material	65
7.6. Assembly and disassembly of the cutting device knives	65
7.7. Regrinding the cutting device knives.....	66

8. FIELD USE	67
8.1. Driving on the road	68
8.2. Bale ejector*	68
8.3. Laying swaths	68
8.4. Pick-up	69
8.5. Feed guide plate	71
8.6. PTO speed	71
8.7. Driving style	71
8.8. Setting the bale density	72
8.9. Setting of net layers	72
8.10. Operate tail gate	73
9. OPERATION / TYING	75
9.1. Control box BALERCONTROL E	75
9.2. E-LINK control box	79
9.3. Eject bales	84
10. SAFETY CLUTCH / REVERSING UNIT	85
10.1. Drive shaft with shear bolt yoke*	85
10.2. Drive shaft with cam-type cut-out clutch*	85
10.3. Reverse main drive	85
10.4. Hydraulic bottom door*	86
11. MAINTENANCE / SETTING	90
11.1. General notes	90
11.2. Environment/Disposal	90
11.3. Tensioners	90
11.4. Maintenance of the net tying unit	91
11.5. Emergency operation of the tying unit	92
11.6. Components for Balercontrol	96
11.7. Hydraulic layouts	99
11.8. Setting the sensors*	102
11.9. Short check E-LINK	103
11.10. Pin assignment E-LINK	104
11.11. Pin assignment BALERCONTROL E	105
11.12. Chain lubrication (oil lubrication)	106
11.13. Roller lubrication (grease lubrication)	107
11.14. Grease knife lever	107
11.15. Lubrication chart	108
11.16. Schematic presentation of the lubrication points	109
11.17. Adjusting the deflectors	110
11.18. Tensioning the roller chains	111
11.19. Winter pause	112
11.20. Tires and Tire pressure	113
12. TECHNICAL DATA	114
12.1. Overview	114
12.2. Dimensions	115



Figure 4

2.4.1. Hydraulic System

Max. operating pressure of the hydraulic system:

- 210 bar

During assembly work on the hydraulic system, in particular if accumulators are used (Figure 4):

- Depressurize hydraulic system (control unit to "Lower")
- Secure hydraulic operated parts (pick-up, cutting device) mechanically against unexpected movements.

According to DIN 20066 must hoses not be older than six years, including storage time.

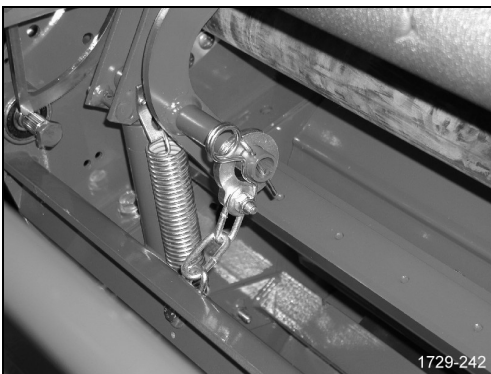


Figure 5

2.5. Net knife safeguard



Attention, risk of injury by cutting! During work in the vicinity of the net knife: fit net knife safeguard.

When maintenance or assembly work is performed in the vicinity of the net knife, the net knife must be mechanically secured to prevent unintentional falling-down: (Figure 5) insert and secure safety chain with spring clip.

After termination of maintenance and assembly work: remove net knife safeguard.

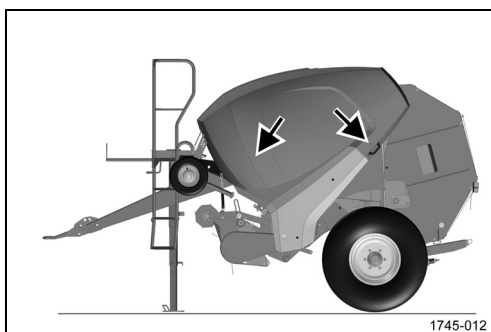


Figure 6

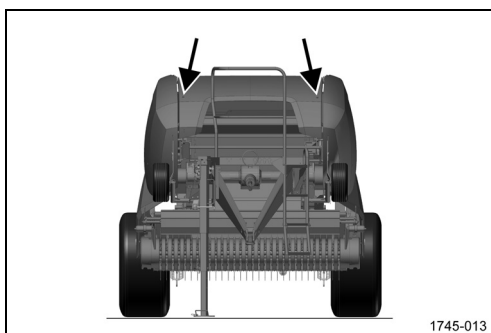


Figure 7

2.6. Guard casings

To open the guard casings on the machine, turn the catches concerned with a 13 mm spanner slightly in counter clockwise direction and pull off the guard casing from the machine.

- Catches at the left and right guard casing: Figure 6
- Catches at the front guard casing: Figure 7

For closing press the guard casing against the machine until the locking of the catches can be heard.



Attention, danger of injury! Never operate the machine with open guard casings!

2.7. Maintenance Platform and Ladder

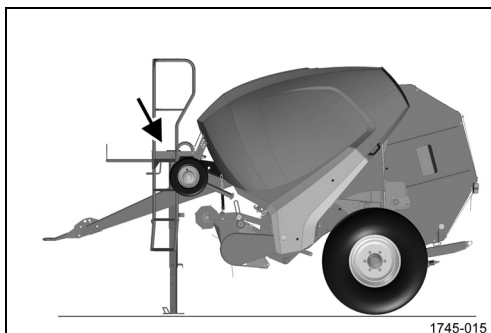


Figure 8



Attention, danger of falling! Never step onto the maintenance platform (Figure 8), while the machine is in motion. Before stepping onto the maintenance platform: stop machine, switch-off power take-off shaft and tractor motor and wait for standstill of the machine.

Step only via the ladder onto the maintenance platform and leave it the same way. Never step onto the hinged up ladder – always hinge down ladder prior to enter it.

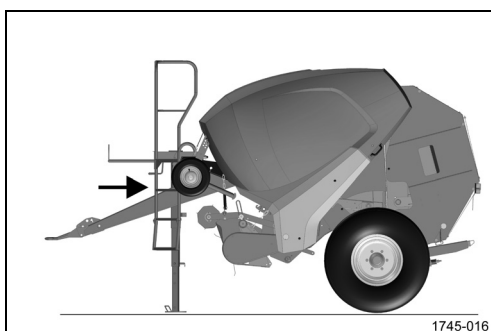


Figure 9

To step onto the maintenance platform: Unlock and hinge down the ladder (Figure 9).

Before machine can move on: Hinge up ladder (Figure 9) and lock it.